



型号(1代码·2M) — 3L  
EAHTS3 — 4.5


■请按步骤1~3选择型号和参数后进行订购。



型号区分: 代码 **5** 天发货



EAHTS

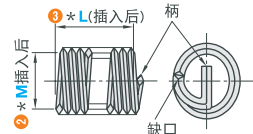


材质 SUS304

### 螺纹套用丝攻



粗牙	加工方式	(M3~5)
EAHTX	粗攻丝	
EAHTY	细攻丝	
EAHTZ	精攻丝	

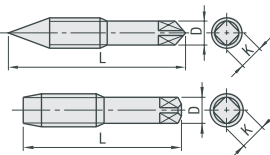


材质 SKH 硬度 61~64HRC

### 螺纹套插入工具



EAHTP


No.	材质		表面处理
	套筒	心轴	
3~6	PPS	SCM435	发黑 (SCM435用)
8~16	SCM435	SCM435	



### 去舌片工具



EAHTB




材质 SCM435  
表面处理 发黑


### 螺纹套拔出工具



EAHTN(No.1)



EAHTN(No.2·3)



材质 S45C  
表面处理 发黑

### 螺纹套

型号		2 * M	3 * (L) 插入后	螺距	螺纹底孔直径 (参考)
EAHTS (粗牙)	1 代码	3	4.5	0.5	3.11~3.20
		4	6	0.7	4.16~4.29
		5	7.5	0.8	5.18~5.33
		6	9	1.0	6.22~6.40
		8	12	1.25	8.28~8.48
		10	15	1.5	10.33~10.56
		12	18	1.75	12.38~12.64
	16	24	2.0	16.44~16.73	

\*M、L为插入螺纹孔之后的尺寸。插入前的L尺寸较短。

### 螺纹套用丝攻

型号		适用 螺纹套M	L	D	K
EAHTX EAHTY EAHTZ (粗牙)	3	3	55	5	4
	4	4	61	5.5	4.5
	5	5	67	6	5
	6	6	65	6.2	5.5
	8	8	75	7	5.5
	10	10	82	8.5	6.5
	12	12	88	10.5	8
16	16	105	14	11	

### 螺纹套插入工具

型号		适用 螺纹套M	L	A
EAHTP	3	3	150	80
	4	4		
	5	5		
	6	6	165	103
	8	8	175	
	10	10	180	
	12	12	200	
16	16	210	124	

### 去舌片工具

型号		适用 螺纹套M	L	D	d	
EAHTB	3	3	100	6	1.8	
	4	4			2.6	
	5	5			3.5	
	6	6		10	4.2	
	8	8		12	5.5	
	10	10		110	14	7.5
	12	12		115	16	8.5
16	16	114	20	12		

### 螺纹套拔出工具

型号		适用 螺纹套M	L	A
EAHTN	1	3·4·5	92	60
	2	6·8·10	109	75
	3	12·16	117	100

