



# 定位导向零件

## 调整螺栓用固定块 标准型·侧面安装型



型号(1代码·2No.) — 3 H  
DBJKC6 — 8

■请按步骤①~③选择型号和参数后进行订购。




型号区分: 7 天发货

### 标准型



代码		材质		表面处理
尺寸选择型	尺寸指定型	国标	相当	
DBJKC	DBFACH	45	S45C	发黑
DBJKCM	DBFBCN			无电解镀锌
DBJKCS	—	0Cr18Ni9	SUS304	—

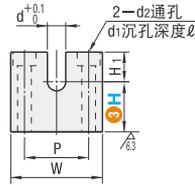


型号		3 H		指定型(最小单位1)	d	T	H <sub>1</sub>	P	W	d <sub>1</sub>	d <sub>2</sub>	ℓ
1 代码	2 No.	选择型										
尺寸选择型 DBJKC DBJKCM DBJKCS	3	5	10 15	10~45	2.5	7	5	16	26	6	3.5	3.5
	4	5	10 15 20		3.5							
	5	6	10 15 20 25		4.5							
	6	8	10 15 20 25 30		5.5							
	8	10	15 20 25 30		7.5							
尺寸指定型 DBFACH DBFBCN	10	12	15 20 25 30	15~85	9.5	10	32	50	14	9	9	
	12	12	15 20 25 30		11.5							
	16	15	20 25 30		15.5							
	19	11	40 65		19							

### 侧面安装型



代码	材质	表面处理
DBJSC	S45C	发黑
DBJSCM		无电解镀锌
DBJSCS	SUS304	—

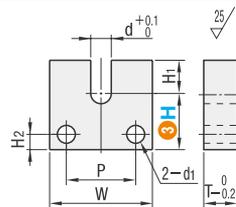


型号		3 H选择		d	H <sub>1</sub>	T	W	P	H <sub>2</sub>	d <sub>1</sub>
1 代码	2 No.	选择型								
DBJSC DBJSCM DBJSCS (No.3-10)	3	15	20	2.5	5	7	26	16	4	4
	4	15	20	3.5						
	5	15	20 25	4.5						
	6	15	20 25 30	5.5	6	9	32	20	5	6
	8	20	25 30 40	7.5	8	12	38	26	6	7
	10	25	30 40	9.5	10	16	50	32	9	9.5
	12	25	30 40	11.5	11	19	65	40	12	11.5
	16	25	30 40	15.5						

### 侧面安装 T尺寸紧凑型



代码	材质	表面处理
DBJSCC	S45C	发黑
DBJSCCS	SUS304	—

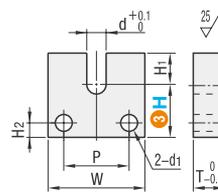

型号		3 H选择		d	H <sub>1</sub>	T	W	P	H <sub>2</sub>	d <sub>1</sub>
1 代码	2 No.	选择型								
DBJSCC DBJSCCS	4	15	20	3.5	5	3	25	16	4	4
	5	15	20 25	4.5						
	6	15	20 25 30	5.5	6	5	32	20	5	6
	8	20	25 30 40	7.5						

